

## IF your Fob has two CR2016 batteries:


### Changing the Batteries

The eKEY Fob comes with two CR2016 lithium coin batteries. You will need to replace the batteries when the red LED flashes. Battery life is subject to usage, conditions, and type of battery used.

To replace the batteries:

1. Insert the tip of a flathead screwdriver into the notch on the side of the eKEY Fob and turn to open the case.
2. Remove the existing batteries.
3. Replace with two new CR2016 batteries with the + polarity facing up on both batteries.
4. Replace the cover and snap to close.

Figure 2. Changing the batteries

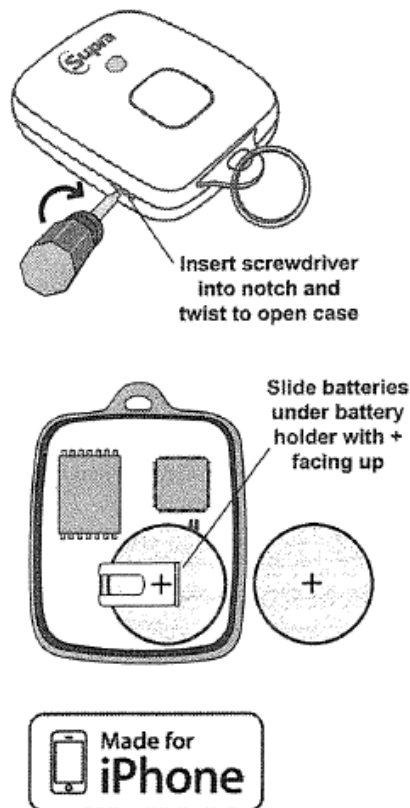

For proper recycling, dispose of all batteries as required by local ordinances or regulations.

### Trademark

Supra and eKEY are trademarks of UTC Fire & Security. Bluetooth and the Bluetooth logo are trademarks of Bluetooth SIG. iPhone is a trademark of Apple Inc., registered in the U.S. and other countries.

"Made for iPhone" means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

### Warranty

UTC Fire & Security warrants the eKEY Fob for a period of one year after the date of purchase under normal use against defective workmanship and materials (batteries excluded). The warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

### FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**2002/96/EC (WEEE directive).** Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information, visit [www.recyclethis.info](http://www.recyclethis.info).

Technical Support  
877.699.6787, 6am to 7pm Pacific time  
[www.supraekey.com](http://www.supraekey.com)

RoHS  
COMPLIANT

## IF your Fob has one CR2032 battery:

### Change the Battery


The eKEY Fob comes with one CR2032 lithium coin battery. Replace the battery when the red LED flashes. Battery life is subject to usage, conditions, and type of battery used.

Replace the battery:

1. Insert the tip of a flathead screwdriver into the notch on the side of the eKEY Fob and turn to open the case.
2. Remove the existing battery.
3. Replace with one CR2032 battery with the positive (+) polarity facing up.
4. Replace the cover and snap to close.

For proper recycling, dispose of all batteries as required by local ordinances or regulations.

Figure 2. Change the battery

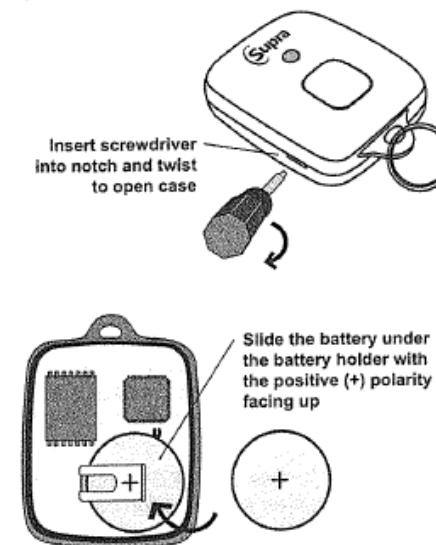

### Technical Support

877-699-6787, 6am to 7pm Pacific time  
[www.supraekey.com](http://www.supraekey.com)

### Trademark

© 2014 United Technologies Corporation. All rights reserved. eKEY is a registered trademark of United Technologies Corporation (UTC). Other brand and product names are or may be trademarks of, and are used to identify products or services of, their respective owners.

"Made for iPhone" means that an electronic accessory has been designed to connect specifically to an iPhone and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

### Warranty

UTC warrants the eKEY Fob for a period of one year after the date of purchase under normal use against defective workmanship and materials (battery excluded). The warranty does not cover damage resulting from accident, unreasonable use, negligence, improper service or other causes not arising out of defects in material or workmanship.

### FCC

#### United States (FCC)

This device complies with part 15 of the FCC rules. Operation is subject to the following conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Canada (IC)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Cet équipement est conforme à la (aux)<sup>1</sup> norme(s) canadienne(s) d'exemption de licence RSS Industry Canada. Son opération est sujette aux deux conditions suivantes : (1) cet équipement ne provoquera aucune interférence et (2) cet équipement doit tolérer toute interférence pouvant provoquer une opération indésirable de l'équipement.

#### European Union (CE)

This Class B digital apparatus conforms to the requirements of the following EU directives:

1. R&TTTE Directive (1999/5/EC)
2. WEEE Directive (2002/96/EC)

RoHS  
COMPLIANT

